



Front / Open View

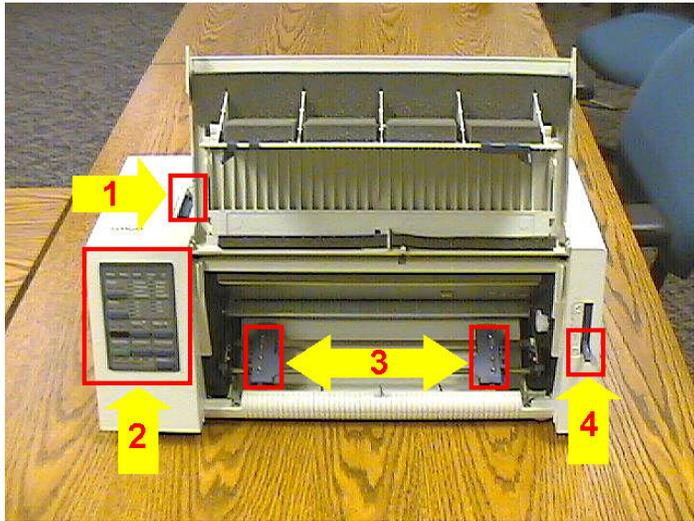


1. Forms Thickness Lever (set at 3 +) - see picture below for close up and details
2. Printer setup panel
3. Tractor doors
4. Paper Select Switch:
 - Up = Continuous Feed
 - Down = Pin fed (WIC)

Enlargement of Forms Thickness Lever

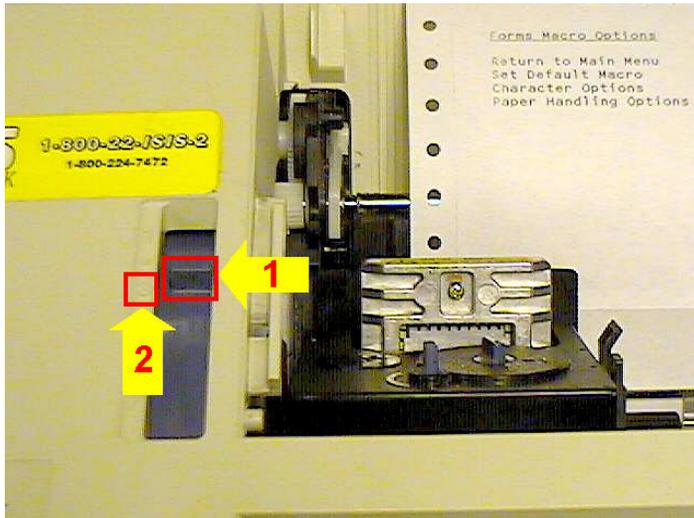


1. Forms thickness lever
2. Lever set at 3

Inside View

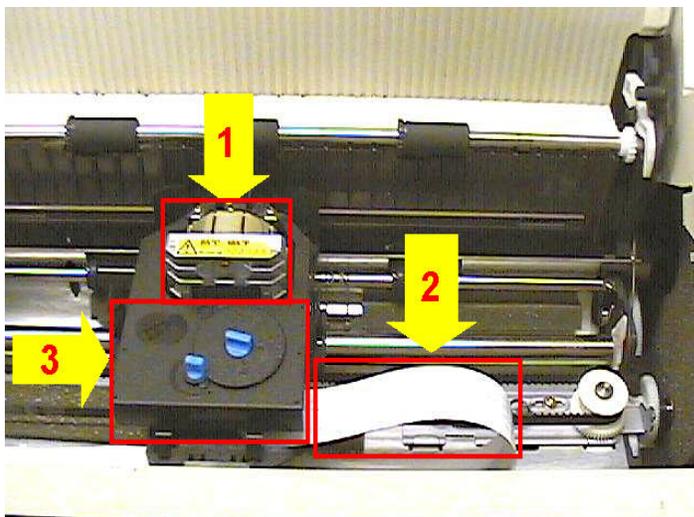

1. Print head motor
2. Ribbon wire
3. Ribbon cartridge

Rear View

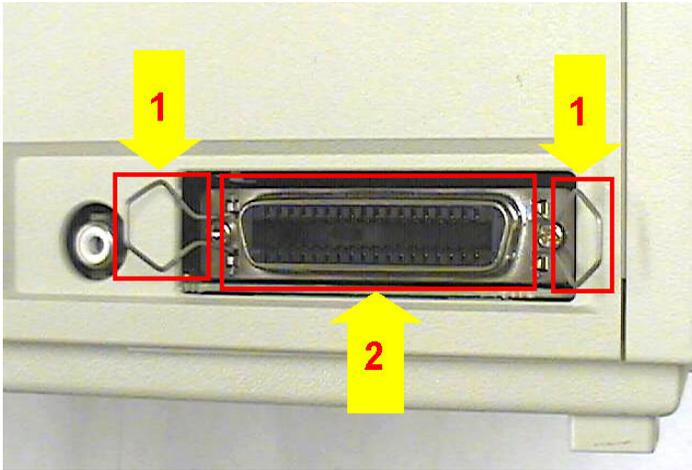

1. Printer retainer 'pins' on both sides
2. Connection from parallel printer to informer adapter or terminal base