

# Tally-Dascom T2365 Printer Setup

**DASCOM**

*Tally*<sup>®</sup>

T2365 T2380 Matrix Printer



# Tally-Dascom T2365 Printer Setup


## TABLE OF CONTENTS

COVER PAGE	1
TABLE OF CONTENTS	2
PRINTER VIEW AND LCD CONTROL PANEL DISPLAY	3
INTRODUCTION; FLOW PATH TO SUB-MENU <sub>s</sub>	4
<u>CONFIGURATION</u>	
SETTINGS AND FLOW PATH (COMPARE: SIDE-BY-SIDE)	5
<u>MENU</u> : MOST COMMON SUB-MENUS ( <a href="#">Change printer configuration</a> )	
PRINT CURRENT CONFIGURATION	6
SELECT A MENU (1-5)	6
SET LINES PER INCH/FORM LENGTH ( <a href="#">Formlen</a> )	7
SET FORM WIDTH ( <a href="#">Width</a> )	8
<u>ADJUST</u> : SUB-MENU	
SET HEAD	9
SET TOP-OF-FORM	9
SET TEAR	10
<u>PATHWAY</u> : SUB-MENU	
TRACTOR	10
<u>CHAR</u> : SUB-MENU	
SET FONT TYPE ( <a href="#">FONT</a> )	11
SET CHARACTERS PER INCH ( <a href="#">CPI</a> )	11
<u>PRINTER SETUP</u> :	
FUNCTION AND DESCRIPTION LIST	12 -13
FLOWCHART	13
<u>WIC CONTACTS</u> :	14

# Tally-Dascom T2365 Printer Setup

## PRINTER VIEW AND CONTROL PANEL DISPLAY

### FRONTAL VIEW:

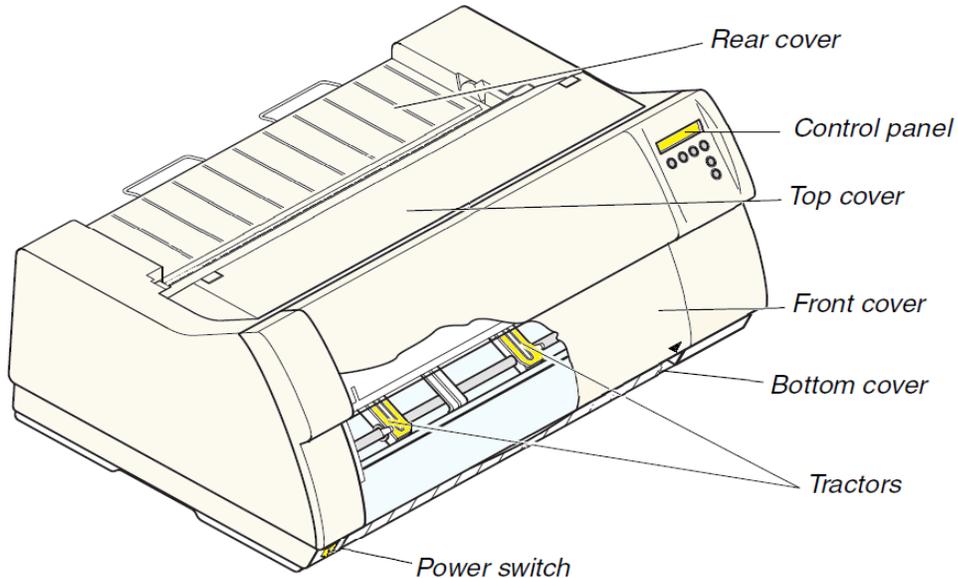


### LCD CONTROL PANEL DISPLAY FUNCTION VIEW:

The LC Display tells you all the important printer settings and informs you which functions are currently assigned to which keys. Example below:

The upper line informs you that the printer is either in **Online** or **Offline** mode.

- The example below displays the printer's status as in the **Online** mode.
- The selected paper path is **Trac1** (Tractor 1 = 'tractor' mode).
- The function is **Tear** indicating that key function is currently active in manual mode.
- Once changes have been made and saved, press **Online** to return to the main menu.

Select **Setup** to access Online MENU (Primary) and to change printer configurations.

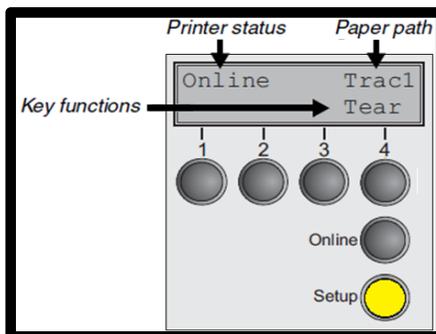

# Tally-Dascom T2365 Printer Setup

## INTRODUCTION: FLOW PATH TO SUB-MENUs

The flow path provides Staff with a step-by-step process to configure Tally-2365 printers.

### CONTROL PANEL

There are three levels to make Configuration changes through the T2365 Control Panel:


Setup

Primary Menu

Sub-Menu

Press **SETUP**  to access any of the **Primary Menus**:\*

- a. Menu
- b. Adjust
- c. Paperway
- d. Char

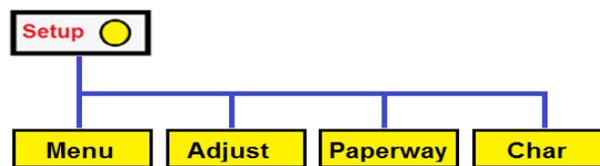

2. Example: Select MENU to access **Sub-Menus**
3. Select NEXT until you see the **Sub-Menu** where you will make changes settings.
4. Make your changes in the **Sub-Menu**.
5. Then, save the changes by pressing 'SET'. When you have made your changes, press **SETUP** .


### HOW TO CHANGE PRINTER CONFIGURATIONS

First, print the printer configurations: to view the current settings.

1. [Page 3](#) shows the printer and control panel.
2. [Page 5](#) shows the link between configuration NAME and Sub-Menu.
3. [Menu1](#) displays what the settings should be for Food Instrument (FI) printing.

Example:

**FLOWPATH:** (e.g., CPI) Setup, Menu, Next....**CPI**, < or >, Set **Menu1**.\*\*

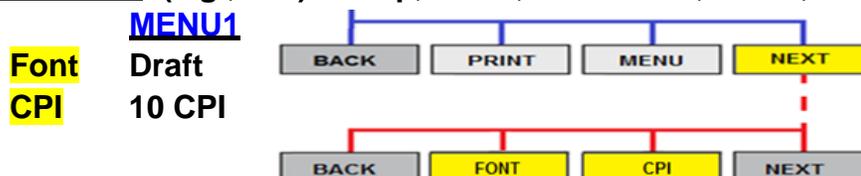

4. [Pages 6-11](#) are examples of “How to make configuration changes” in Sub-Menus. Follow the '**yellow**' highlighted boxes to make changes to your configurations.

\* Menu, Adjust, Paperway and Char      \*\* Set (Save)


# Tally-Dascom T2365 Printer Setup

## PRINTER CONFIGURATION SETTINGS:

NAME	MENU 1
Font	Draft
CPI	10 CPI
LPI	6 CPI
Skip	0.0 Inch
ESCChar	ESC
Emulate	Epson L1-2250
Bidir	On
CG-Tab	Graphic
CharSet	E-US ASCII
Sl.Zero	Off
Auto-CR	On MENU
Auto-LF	Off
AutoTear	ViewTear=Off
Width	8 Inch
Barcode	Off
Barcode	Unsecured
Single	
FormLen	3.5
↵ Head	18 ↵ ↵
ForAdj	12/72
Tractor	*
FormLen	3.5
Head	18
Form Adj	12/72
Interf.	Shared
Buffer	128k
CX-bid	On
Menu	1
ColorOpt	Not Installed ***
Tear Adj Trac1	0/72
AutoASF	Off
AutoTEA	Off
Quitm	On
AGA	On
AGA offset	0
Pap.back	normal
PMS	On
APW	On
AED	On
Sound	On
Single	On
FFmode	Off
Wrap	On
Rightzo	Off
Leftzon	Off
Hed up	Off
Pagewid	92/10
PhysIn	0/10

\*\*\*Some settings are not applicable (purchase options)

## PRINTER PATH FLOW: SUB-MENU CHART


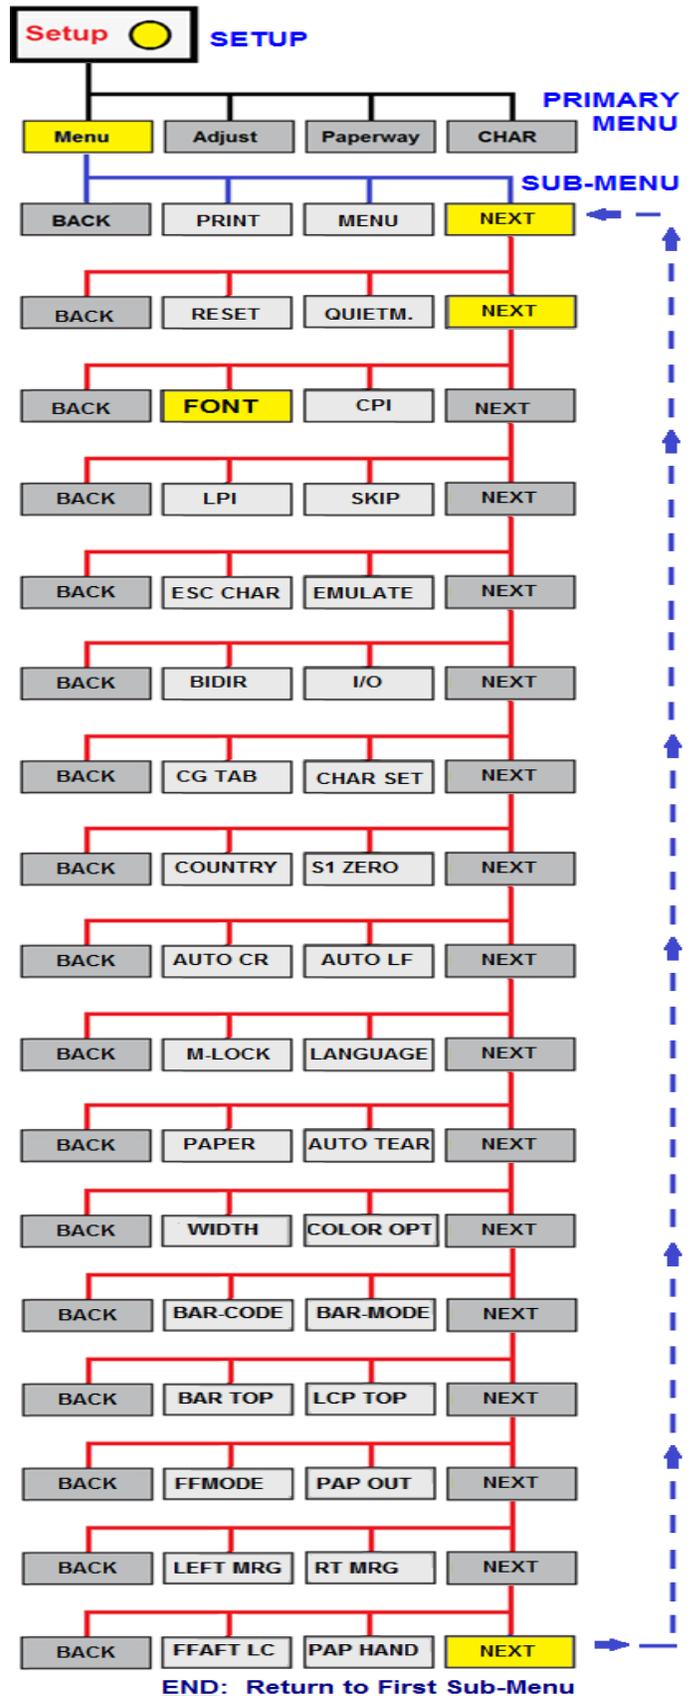


# Tally-Dascom T2365 Printer Setup

## MENU: SUB-MENU

### TALLY-DASCOM 2365 PRINTER CONFIGURATION:

**EXAMPLE:** How to Print Current Configuration.

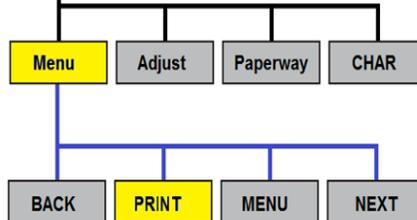
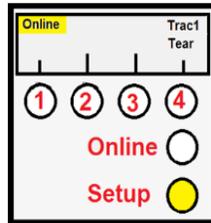


1. Printer is on: Online Menu Displaying
2. Press Setup
3. Press Menu (1)
4. Press Print (2) to begin printing
5. Wait until printing has stopped
6. Press Online (to return to printing Food Instruments (FIs) or Reports)


### TALLY-DASCOM 2365 MENU (1-5)

More than one menu can be configured to the printer (e.g., Menu1 for Food Instruments (FIs) and Menu2 for Report Printing, etc.).

**EXAMPLE:** How to change MENU selection  
Currently, it is set to 2 (Report printing).  
Let's change the menu to 1 (FI printing).

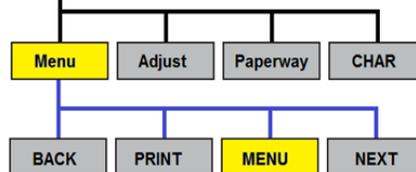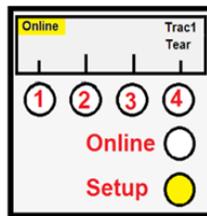

1. Press Setup
2. Press Menu (1)
3. Press Menu (3)
4. Select < or > (Load Menu = 1, 2, 3, 4, or 5)  
a. 1 is generally used for FI printing.
5. Press Set (to save Menu choice)

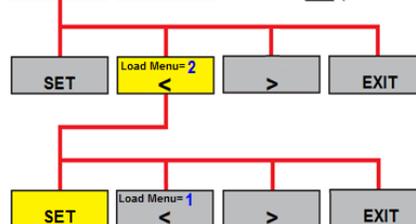

Select Setup or Online to return to Online Status.


# Tally-Dascom T2365 Printer Setup

**MENU: SUB-MENU**

**Change Printer Setting: FORM LENGTH (Formlen)**

Food Instrument - FI Printing 6-LPI = 21 (3.5")

Report Printing 6-LPI = 66 (11.0")

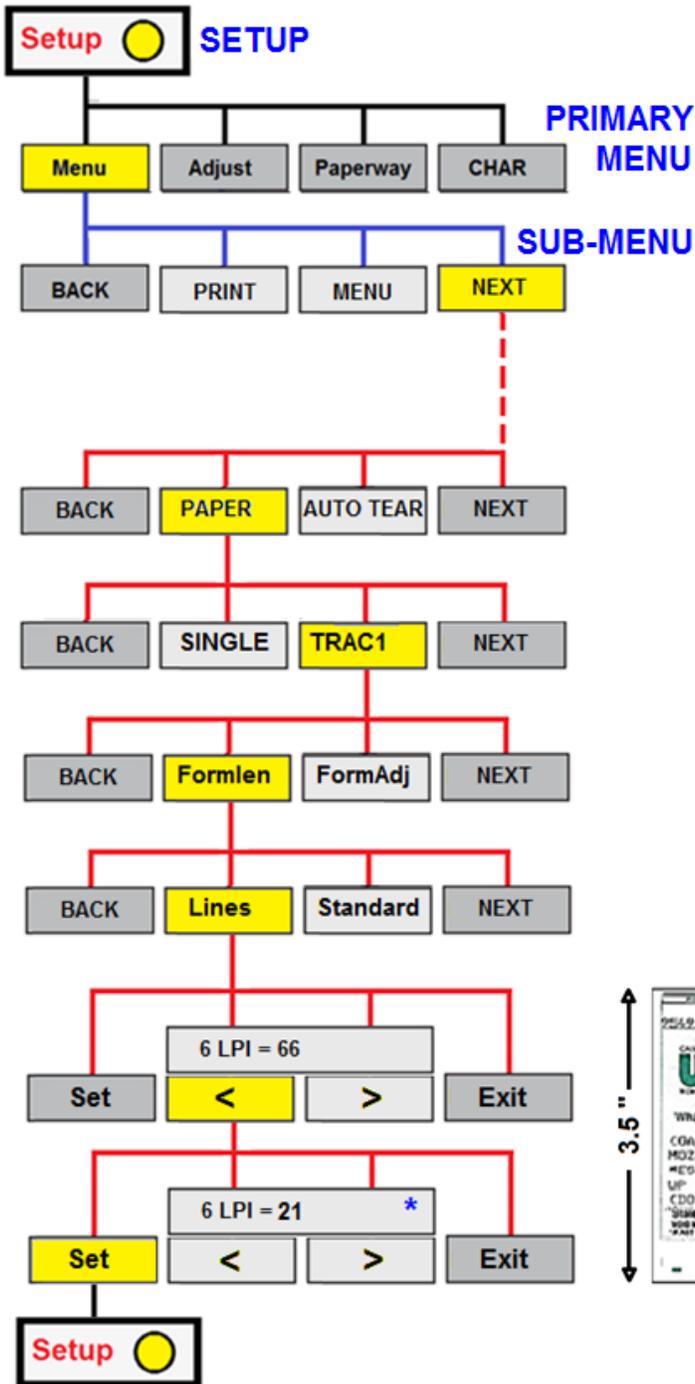

\* Confirm # Saved




# Tally-Dascom T2365 Printer Setup

**MENU: SUB-MENU**

**Change Printer Setting: Form Page Width (Width)**

**FI Printing Width 8.0"**

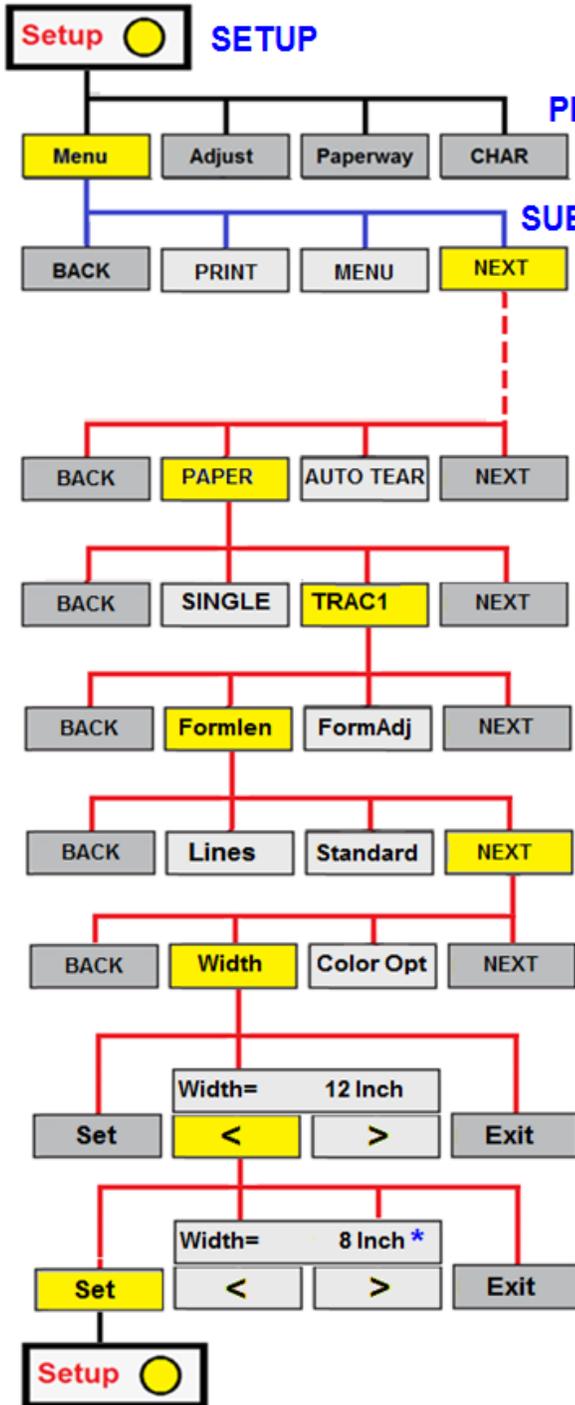


\* Confirm # Saved




# Tally-Dascom T2365 Printer Setup

## 'ADJUST' SUB-MENU

### SET HEAD

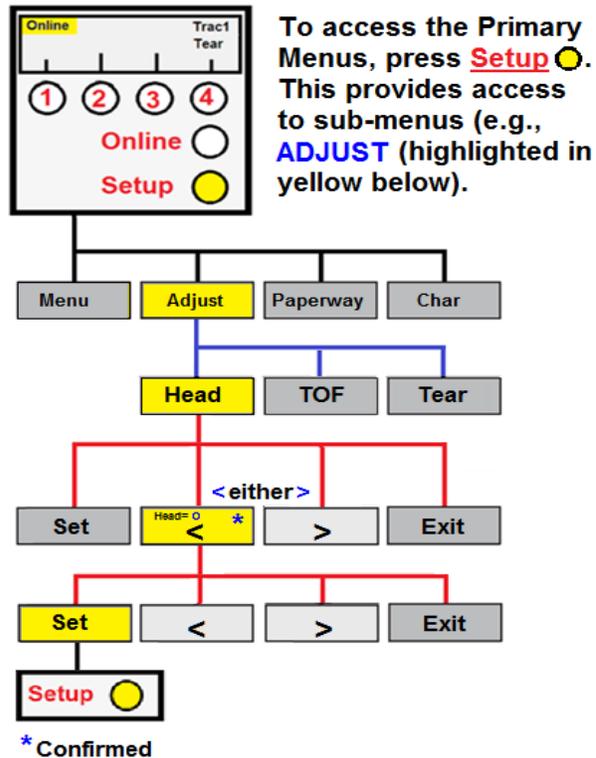


### SET TOP-OF-FORM

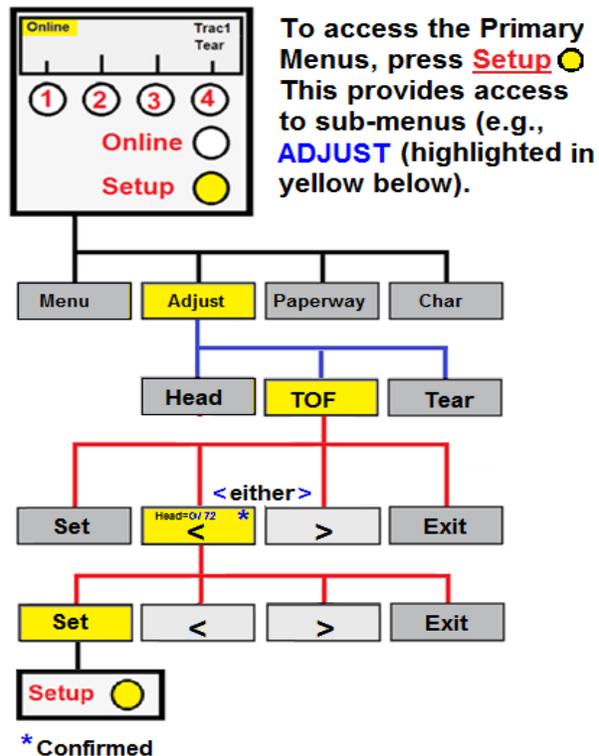

# Tally-Dascom T2365 Printer Setup


## 'ADJUST' SUB-MENU

### ADJUST TEAR

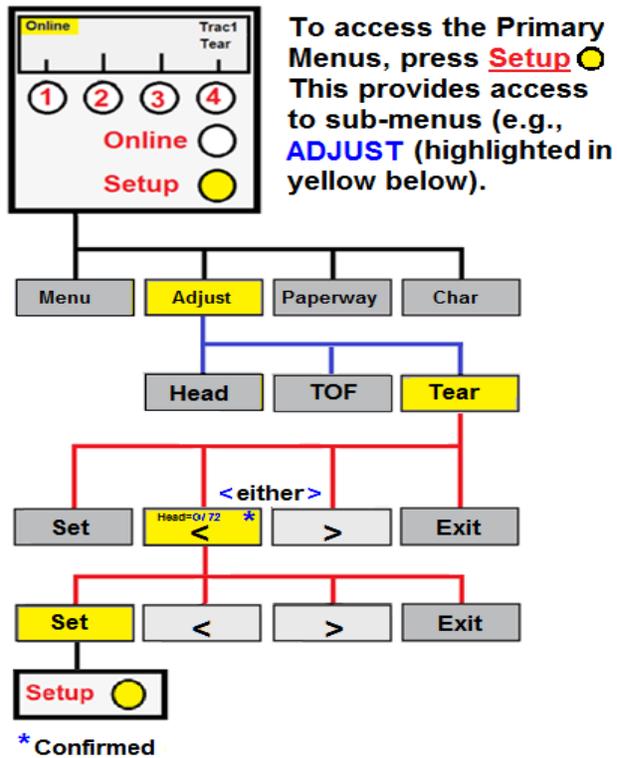

## 'PATHWAY' SUB-MENU


### TRACTOR

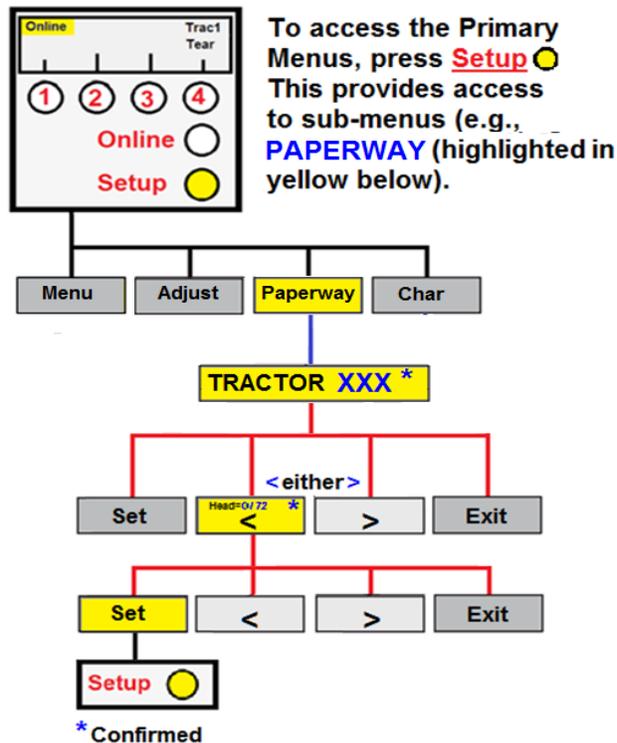


# Tally-Dascom T2365 Printer Setup

## 'CHAR' SUB-MENU

### Change Printer Setting: SET FONT TYPE (FONT)

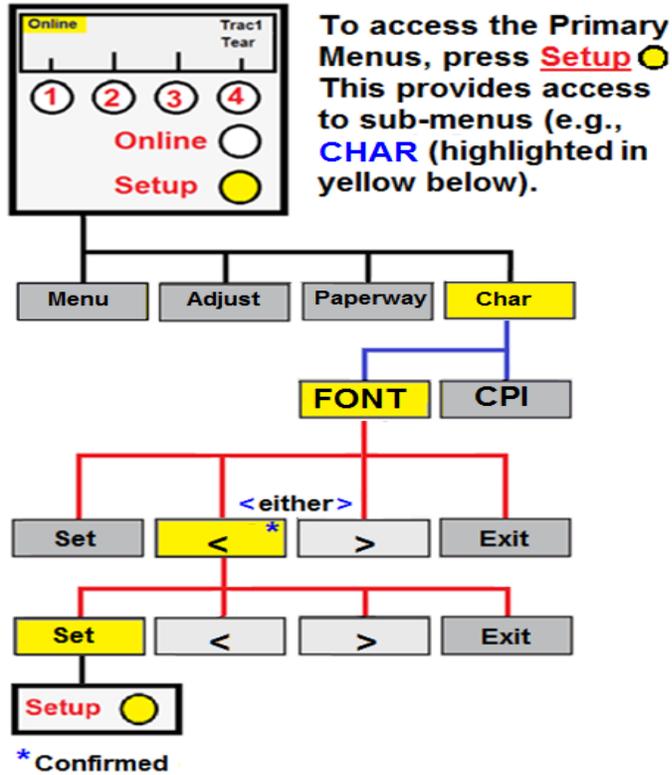

### Change Printer Setting: SET CHARACTERS PER INCH (CPI)

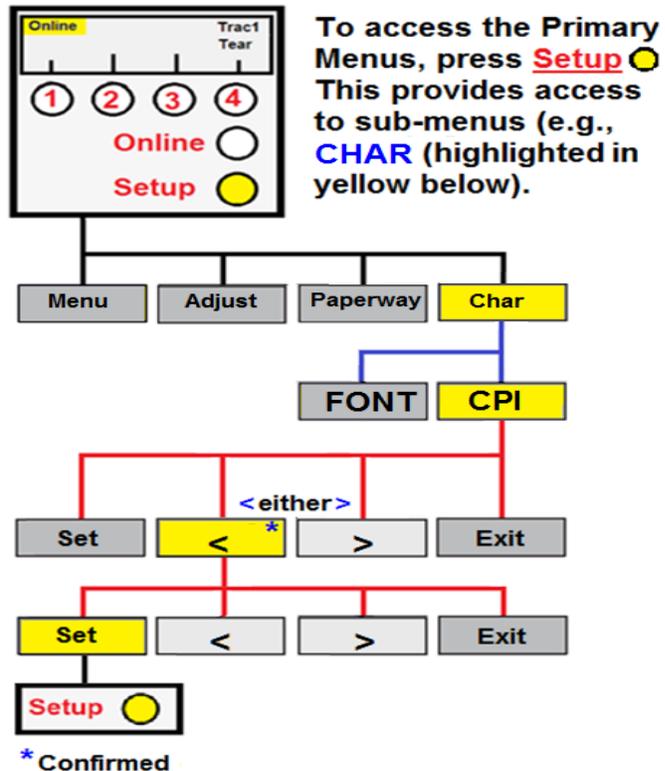


# Tally-Dascom T2365 Printer Setup

Function	Description
<b>Print</b>	<b>A list of the current parameters is printed.</b>
<b>Menu</b>	A menu is loaded. There are five menus to choose from.
<b>Reset</b>	The current menu returns to the default values (factory settings)
<b>Quietm.</b>	Switches between normal and quiet mode printing.
<b>Font</b>	Selects the character style and its quality.
<b>CPI</b>	Sets the characters per inch (character pitch). The higher the parameter, the smaller the character spacing.
<b>LPI</b>	Sets the lines per inch (line density). The higher the parameter, the smaller the line spacing.
<b>Skip</b>	Skips the perforation. 7 different values can be defined.
<b>Bidir</b>	Setting <b>On</b> : Printer prints in both directions (bidirectional). Setting <b>Off</b> : Printer prints only in one direction (from left to right).
<b>Auto-CR</b>	Switches the automatic carriage return on or off after receiving the signal CR (carriage return).
<b>Auto-LF</b>	Switches the automatic line feed on or off after receiving the signal CR (carriage return).
<b>MenLock</b>	If <b>Menlock = Menu</b> is activated, the Setup menu is locked. If you select <b>Menlock = All</b> , the keys <b>Paper</b> , <b>Font</b> and <b>CPI</b> are also locked.
<b>Paper</b>	Selects the paper parameters <b>Formlen</b> (form length), <b>FormAdj</b> (first printing position) and <b>Head</b> (print head gap).
<b>Formlen Lines</b>	Sets the form length via the line formats. Note: the adjustment in <b>Lines</b> depends on the selected LPI.
<b>Formlen Standard</b>	Selects the form length by standard formats. Using <b>Standard</b> , different paper formats can be selected directly, e.g., DIN A4, Legal, letter.  The LC display indicates <b>No Format</b> if a value is selected by the <b>Line</b> function or ESC sequences, which does not correspond to a standard format.
<b>FormAdj</b>	Sets the first position of a form in n/72 inch, separately adjustable for each paper path.
<b>Head</b>	Adjusts the printhead gap manually; separately adjustable for each paper path.

# Tally-Dascom T2365 Printer Setup

Function	Description (cont.)
<b>Print</b>	<b>A list of the current parameters is printed.</b>
<b>FormAdj</b>	Sets the first position of a form in n/72 inch, separately adjustable for each paper path.
<b>Head</b>	Adjusts the printhead gap manually; separately adjustable for each paper path.
<b>AutoTear</b>	<p>The auto tear function or auto view function can be selected as desired. When auto view is switches on, the last printed text is visible. As soon as data is received the paper moves to the “normal” print position. After printing, the paper waits for the given interval to bring the paper once more to the auto view position. The paper is in the tear off position when auto tear is switched on, the perforation of the paper is positioned at the tear off edge of the printer. If data is received, the paper returns to the normal print position. After printing, the printer waits for the given interval to bring the paper once more to the tear off position. If the tear off edge is not aligned, with the perforation of the paper then this can be corrected.</p> <p>If the parameter <b>Tear at TOF</b> is set, the paper perforation is automatically positions at the tear off edge as long as the current print position TOF is activated.</p>
<b>Width</b>	Selects the line length in inches.
<b>FFmode</b>	<p><b>FFmode = on:</b> The paper will be positioned in the first printing line and form feeds will be ignored.</p> <p><b>FFmode = off:</b> Form feed will be performed in all cases.</p>

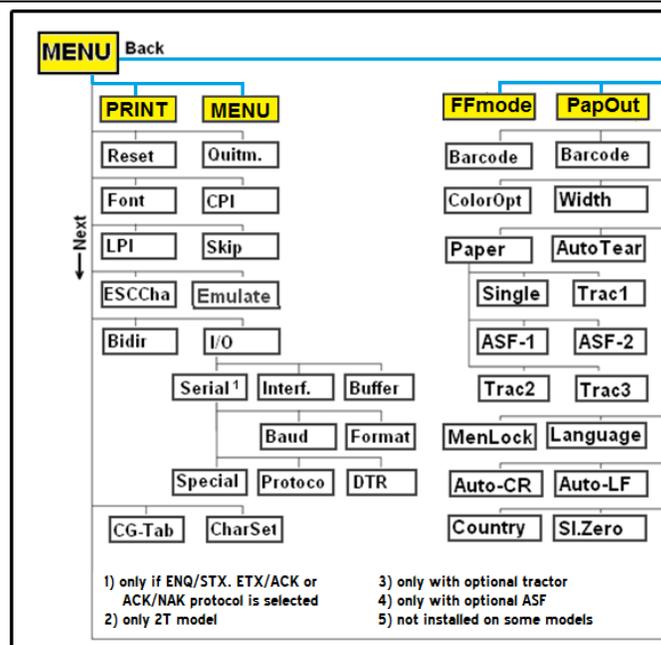

# Tally-Dascom T2365 Printer Setup

## WIC CONTACTS

ITSD-PHATS-TSU HELP DESK (800) 224-7472  
FAX # (916) 263-3319

### LOCAL AGENCY INVENTORY SYSTEM (LAIS)

- Yolanda Jackson [wicinventorydesk@cdph.ca.gov](mailto:wicinventorydesk@cdph.ca.gov)
- Web Sign-On Link <http://lais.phfewic.org>

### LOCAL OPERATIONS SECTION (LOS);

- LOS Analyst of the Day Previously LASS (800) 852-5770
- LOS Analyst of the Day (Alt. phone) (916) 928-8500
- LOS FAX # (916) 263-3314

## WHAT TO DO BEFORE CALLING THE WIC HELP DESK

The Help Desk only supports printer hardware that has been 'tested/certified'.

- WIC ISIS Logon ID; Agency and User (e.g., 999jdoe)
  - Printer ID (e.g., wicv9999)
  - Brief explanation of problem; printer won't print, can't connect
- If the problem has not been resolved:**
- Printer Name/Model: e.g., Tally-Dascom T2365, etc.
  - Ask, if there been any recent changes; Printer swap, site relocation, etc.
  - Contact Person and Contact Information (Name, Phone, email, etc.).
  - Existing Ticket Number, if there is an on-going issue/problem

## PRINTER WEB LINK: Tally-Dascom T2365 Printer User's Guide

[http://www.dascomamericas.com/Support/Default.aspx?type\\_id=4&info\\_id=3&itemid=17&name=T2365&act=4](http://www.dascomamericas.com/Support/Default.aspx?type_id=4&info_id=3&itemid=17&name=T2365&act=4)

The Printer User's Guide is available on-line. (Setup , Primary Menu, Sub-Menu will guide you to make most changes). All functions that were not covered in the previous pages may be found at the web-link provided below: Printer links for all WIC tested/certified printers are located at:

<http://www.cdph.ca.gov/programs/wicworks/Pages/WICISIS.aspx>